





Type 8025 can be combined with...



**Type S020**  
INSERTION fitting

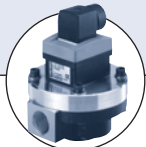


**Type 8070**  
Positive displacement  
flow sensor

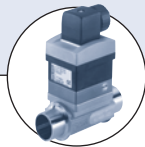


**Type 8030**  
INLINE flow sensor



**Type 2712 (8630)**  
Continuous  
TopControl system

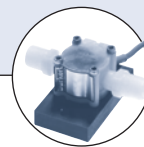

**Type 8031**  
Flow sensor

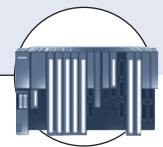

**PLC**

The flow transmitter is specially designed for use in neutral and slightly aggressive, solid-free liquids.

The device is available in different models:

- Compact transmitter with paddle-wheel sensor: standard signal output or battery powered indicator version.
- Remote universal transmitter for panel or wall mounting for connection to a flow sensor from the market; sensors with open collector output, relay reed output, TTL, CMOS or coil can be operated by this transmitter.
- Remote transmitter, for panel or wall mounting: standard signal output for connection to the Bürkert 8020 / 8030 sensor „Low Power“ version.

## Digital flow transmitter for continuous flow measurement

- Compact or remote version for DN 06 to 400, PN10
- Shows both flow rate and volume (with two totalizers)
- Automatic-calibration: TEACH-IN
- Simulation: all output signals provided without the need for real flow

### Technical data (common to the various versions)

#### General data

<b>Display</b>	15 x 60 mm, 8-digit LCD, alphanumeric, 15 segments, 9 mm high
<b>Electrical connections</b>	shielded cable with 1.5 mm <sup>2</sup> max. cross-section

#### Environment

<b>Ambient temperature</b>	0 to +60 °C (operation and storage)
<b>Relative humidity</b>	≤ 80 %, non condensated

#### Standards and approvals

<b>Standard</b>	
EMC	EN 61000-6-2, EN 61000-6-3
Security	EN 61010-1
Vibration	EN 60068-2-6
Shock	EN 60068-2-27

## System versions

### The compact version



combines a paddle-wheel flow sensor and an electronic module with a display in an IP65 enclosure.

The output signals are provided via a cable plug EN175301-803 or two cable glands.

Bürkert designed fitting ensures simple installation of the Bürkert sensor into pipes from DN 15 to DN 400.

### The panel-mounted version



or the market.

The output signals are provided on a terminal strip.

consists of an electronic module 8025 integrated in a front-cover. The associated separate flow sensor is an 8020, an 8030 with pulse signal, or another flow sensor available from Bürkert

### The wall-mounted version



Bürkert or the market.

The output signals are provided on a terminal strip via cable glands.

consists of an electronic module 8025 in an IP65 enclosure. The associated flow sensor is an 8020, an 8030 with pulse signal, or another flow sensor available from

## Operation and display

The device can be calibrated by means of the K-factor, or via the TEACH-IN function. Customized adjustments, such as measuring range, engineering units, pulse output are carried out on site.

The operation is specified according to two or three levels, depending on the transmitter version:

### Flow transmitter (compact or remote)

#### ▶ Indication in operating mode / Display

- flow rate
- output current
- main totalizer
- daily totalizer with reset function

#### ▶ Parameter definition

- language
- engineering units
- K-factor / TEACH-IN function
- measuring range 4-20 mA
- pulse output
- relay (option)
- filter
- reset main totalizer

#### ▶ Test

- alteration of basic adjustment (offset, span)
- frequency test of sensor
- flow simulation (dry-run test operation)


### Battery indicator / totalizer (compact)

#### ▶ Indication in operating mode / Display

- flow rate
- main totalizer
- daily totalizer with reset function

#### ▶ Parameter definition

- language
- engineering units
- K-factor / TEACH-IN function
- filter
- reset main totalizer

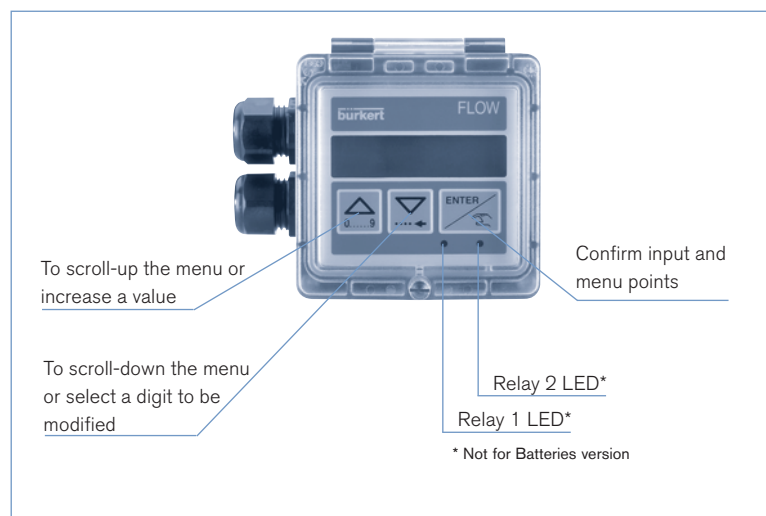

## Compact transmitter


## The compact transmitter

is available in two versions:

- standard signal (4-20 mA, frequency)
- battery indicator / totalizer



## Accuracy diagram

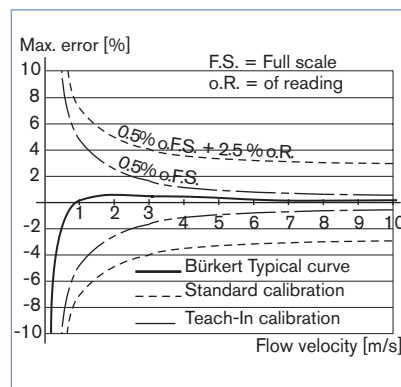

## Design

When liquid flows through the pipe, the paddle-wheel with 4 inserted magnets is set in rotation, producing a measuring signal in the sensor (coil or Hall transducer).



The frequency modulated induced voltage is proportional to the flow velocity of the fluid.

A conversion coefficient (K-factor, available in the instruction manual of the fitting), specific to each pipe (size and material) enables the conversion of this frequency into flow rate.

The electronic component converts the measured signal into several outputs (according to the transmitter version) and displays the actual value.

General data	
<b>Compatibility</b>	with fittings S020 (see corresp. datasheet)
<b>Materials</b>	Housing, cover, lid, nut Front panel foil Screws Cable plug / glands Wetted parts materials Fitting Sensor finger, paddle-wheel Axis and bearing / Seal
<b>Electrical connections</b>	Cable plug EN 175301-803 or cable glands M 20 x 1.5 or none (for battery version).
PC Polyester Stainless steel PA	
Brass, stainless steel 1.4404/316L, PVC, PP or PVDF PVDF Ceramics / FKM (EPDM option)	
Complete device data (Fitting S030 + Electronics)	
<b>Pipe diameter</b>	DN 15 to 400
<b>Measuring range</b>	0.5 m/s to 10 m/s (Battery version - Coil transducer) 0.3 m/s to 10 m/s (Hall transducer version)
<b>Fluid temperature</b> with fitting in PVC PP PVDF, brass or stainless steel	0 up to 50 °C 0 up to 80 °C -15 °C up to 80 °C <sup>1)</sup>
<b>Fluid pressure max.</b>	PN10 (see pressure/temperature diagram)
<b>Viscosity</b>	300 cSt. max.
<b>Accuracy</b> Teach-In Standard K-factor	≤ ±0.5% o. FS.* (at 10 m/s) <sup>2)</sup> ≤ ±(0.5% o. FS.* + 2.5% of Reading) <sup>2)</sup>
<b>Linearity</b>	≤ ±0.5% o. FS.* (at 10 m/s) <sup>2)</sup>
<b>Repeatability</b>	≤ 0.4% o. Reading <sup>2)</sup>
Electrical data	
<b>Power supply</b> Standard signal version  Battery indicator / totalizer version	12-30 V DC (V+) ± 10%, filtered and regulated or 115/230 V AC 50/60 Hz (see technical specifications 115/230 VAC) 2 x 9 V DC batteries, autonomy min. 3-4 years at 20 °C (lithium batteries)
<b>Reversed polarity of DC</b>	protected
<b>Current consumption</b> with sensor (without consumption of pulse output)	≤ 70 mA - transmitter with relays ≤ 20 mA - transmitter without relay
<b>Output</b> Standard signal version Signal current  Pulse  Relay Battery indicator / totalizer version	4-20 mA (3-wire with relays; 2-wire without relay) max. loop impedance: 900 Ω at 30 V DC; 600 Ω at 24 V DC; 50 Ω at 12 V DC; 800 Ω with a 115/230 V AC voltage supply Polarized, potential free, 5...30 V DC; 100 mA, protected, line drop at 100 mA: 1.5 VDC 2 relays, freely programmable, 3A, 230 V AC None
Technical specifications 115/230 VAC	
<b>Voltage supply</b>	27 V DC regulated, max. current: 125 mA integrated protection: fuse 125 mA temporised power: 3 VA
Standard	
<b>Protection class</b>	IP65 with cable plug or gland mounted and tightened or with obturator locked if not used.

1) with Battery version = 100 °C

2) Under reference conditions i.e. measuring fluid=water, ambient and water temperature=20°C, applying the minimum inlet and outlet pipe straights, matched inside pipe dimensions.


\* F.S.=Full scale (10 m/s)

## Installation


The 8025 flow transmitter can easily be installed into any Bürkert INSERTION fitting system (S020) by just fixing the main nut.

Minimum straight upstream and downstream distances must be observed. According to the pipe's design, necessary distances can be bigger or use a flow conditioner to obtain the best accuracy. For more information, please refer to EN ISO 5167-1.

EN ISO 5167-1 prescribes the straight inlet and outlet distances that must be complied with when installing fittings in pipe lines in order to achieve calm flow conditions. The most important layouts that could lead to turbulence in the flow are shown below, together with the associated prescribed minimum inlet and outlet distances. These ensure calm, problem-free measurement conditions at the measurement point.

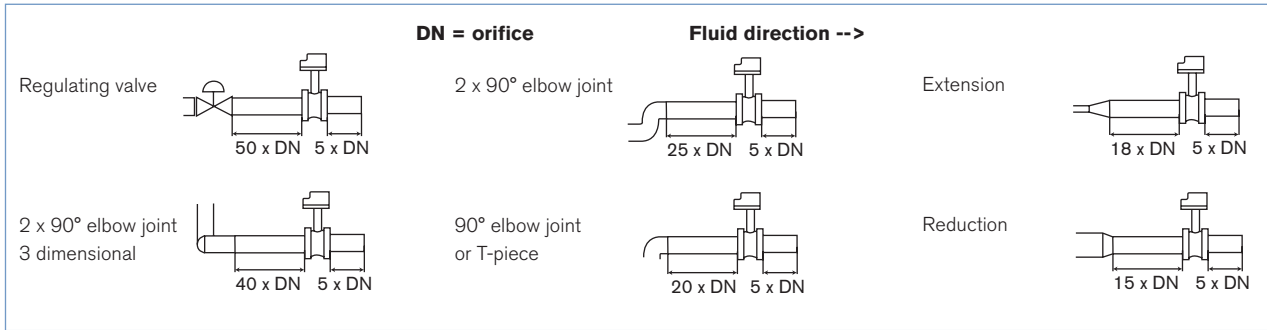

The flow rate transmitter can be installed into either horizontal or vertical pipes.

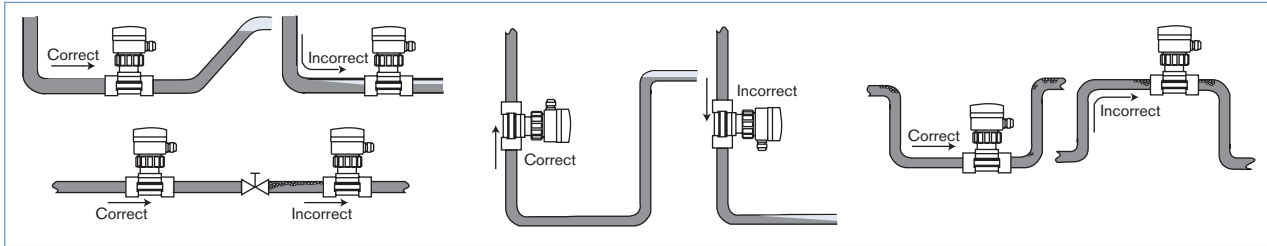


Pressure and temperature ratings must be respected according to the selected fitting material.

The suitable pipe size is selected using the diagram Flow / Velocity / DN.

The flow transmitter is not designed for gas flow measurement.

## Pressure / Temperature diagram

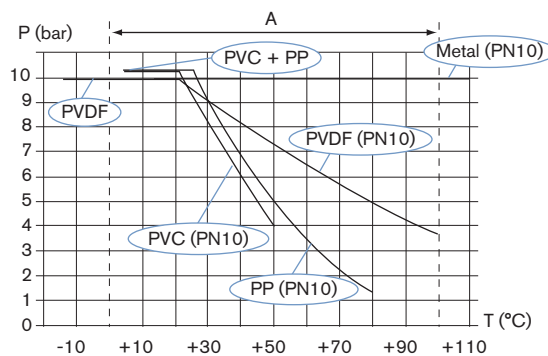


A: Application range for complete device (fitting + transmitter)

## Selection of fitting / pipe size



**Example:**

- Specification of nominal flow: 10 m<sup>3</sup>/h
- Ideal flow velocity: 2...3 m/s


For these specifications, the diagram indicates a pipe size of DN40

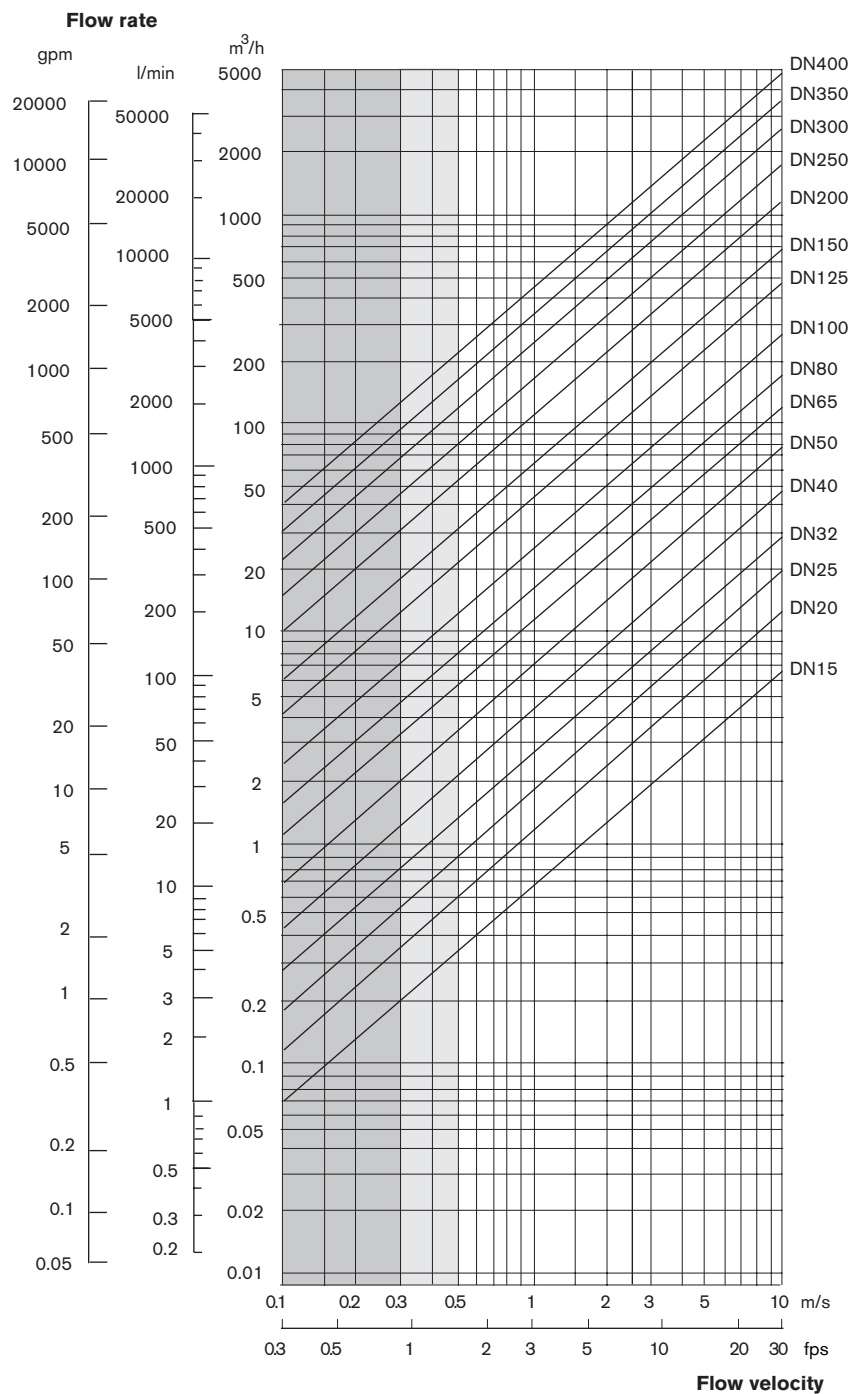

Dimensions [mm]

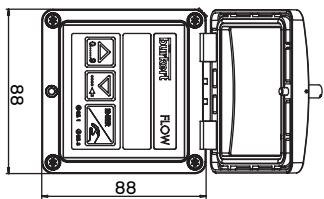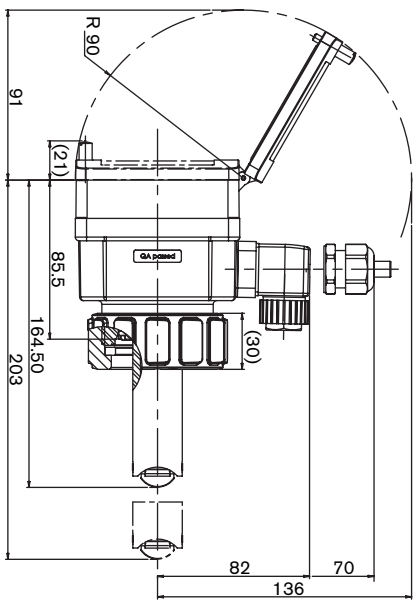

**Note:**  
The length of the sensor finger depends on the fitting used.  
See datasheet Type S020.

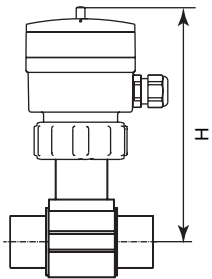

DN [mm]	H [mm]			
	T-Fitting	Saddle	Plastic spigot	St. St. spigot
15	187			
20	185			
25	185			
32	188			
40	192			
50	198	223		193
65	198	221	206	199
80		226	212	204
100		231	219	214
110		227		
125		234	254	225
150		244	261	236
180		268		
200		280	282	257
250			300	317
300			312	336
350			325	348
400			340	

## Remote transmitter

The remote transmitter is available in two versions:


### - 8025 Universal transmitter for connection to Bürkert sensor or other sensor types

This flow transmitter can be associated with Bürkert flow sensor 8020, 8030, 8070... or another flow sensor, with pulse output signal.

### - 8025 transmitter for connection to compact Bürkert sensors.


This flow transmitter can only be associated with Bürkert flow sensor 8020, 8030 or 8070 with „Low Power“ pulse output signal.

Each transmitter is available in either:

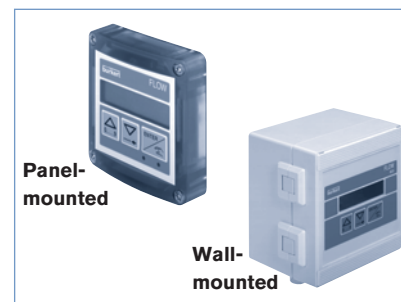


## Dimensions [mm]

### Panel-mounted version

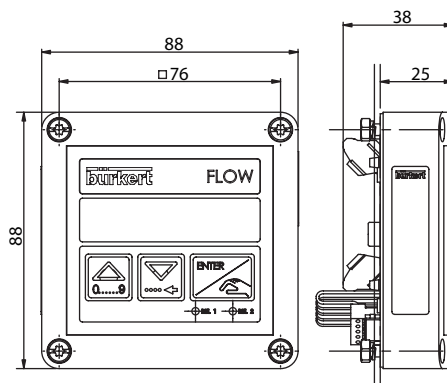

### Wall-mounted version

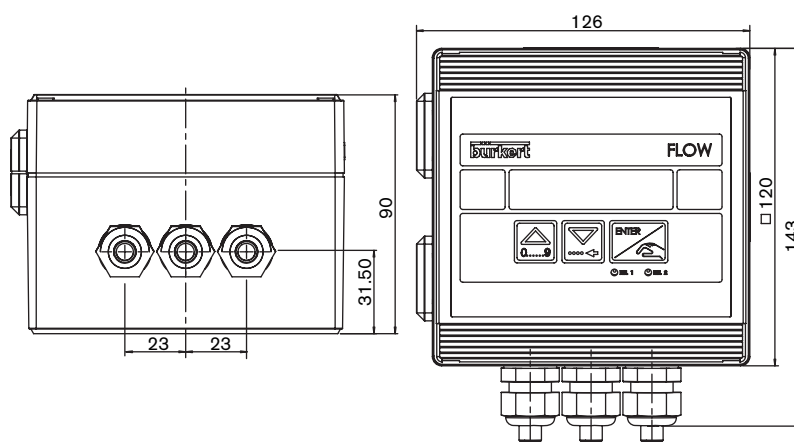

## Technical data (remote version)

General data	8025 Universal transmitter	8025 transmitter
<b>Compatibility</b>	Bürkert flow sensor with frequency output (8020, 8030, 8030HT, 8041, 8031, 8070, 8071) and other sensors with compatible electrical data.	Bürkert flow sensor with frequency output 8020, 8030 or 8070 (pulse "Low Power" version).
<b>Materials</b> Housing, cover Front panel foil Screws Cable glands	PC (panel-mounted version); ABS (wall-mounted version) Polyester Stainless steel PA (wall-mounted version)	
<b>Electrical connections</b>	Terminals (panel-mounted version) or terminals via gland (wall-mounted version)	

Electrical data	Universal transmitter	8025 transmitter
<b>Power supply</b> Panel-mounted version Wall-mounted version	13-30 V DC (V+) $\pm$ 10%, filtered and regulated 13-30 V DC (V+) $\pm$ 10%, filtered and regulated or 115/230 V AC 50/60 Hz (see technical specifications 115/230 V AC)	12-30 V DC (V+) $\pm$ 10%, filtered and regulated 12-30 V DC (V+) $\pm$ 10%, filtered and regulated or 115/230 V AC 50/60 Hz (see technical specifications 115/230 V AC)
<b>Reversal polarity of DC</b>	protected	
<b>Current consumption</b> without sensor (without consumption of pulse output)	$\leq$ 70 mA - transmitter with relays $\leq$ 30 mA - transmitter without relay	$\leq$ 70 mA - transmitter with relays $\leq$ 20 mA - transmitter without relay
<b>Sensor input</b> Frequency range	0.5 Hz or 2.5 Hz up to 1400 Hz - max. voltage: 30 V DC Open collector NPN (with 470 $\Omega$ or 2.2 k $\Omega$ resistance) or PNP, Coil, TTL, CMOS (with 39 k $\Omega$ resistance)	2.5 Hz up to 250 Hz Pulse "Low Power" (open collector NPN)
<b>Sensor output</b> Voltage supply  Current consumption	11...28 V DC (V+ - 2 V DC) or +12 V DC or 5 V DC (with a 13-30 V DC powered transmitter); +27 V DC or +12 V DC or 5 V DC (with a 115/230 V AC powered transmitter) max. current available from transmitter: 100 mA	10-28 V DC (V+ - 2 V DC),  max. current available from transmitter: 1 mA (internal limitation)
<b>Output Transmitter</b> Signal current  Pulse Relay	4-20 mA, configurable in sourcing or sinking mode max. loop impedance: 1200 $\Omega$ at 30 V DC; 900 $\Omega$ at 24 V DC; 450 $\Omega$ at 15 V DC; 300 $\Omega$ at 13 V DC; 1000 $\Omega$ with a 115/230 V AC voltage supply polarized, potential free, 5...30 V DC; 100 mA, protected, line drop at 100 mA: 1.5 V DC 2 relays, programmable, 3A, 230 V AC	4-20 mA (3-wire with relays; 2-wire without relay) max. loop impedance: 900 $\Omega$ at 30 V DC; 600 $\Omega$ at 24 V DC; 50 $\Omega$ at 12 V DC; 800 $\Omega$ with a 115/230 V AC voltage supply  polarized, potential free, 5...30 V DC; 100 mA, protected, line drop at 100 mA: 1.5 V DC 2 relays, programmable, 3A, 230 V AC
<b>Technical specifications</b> <b>115/230 V AC</b> Wall-mounted version	Voltage supply: 27 V DC regulated, Max. current: 250 mA Integrated protection: fuse 250 mA temporised Power: 6 VA	

Standards and approvals	Universal transmitter	8025 transmitter
<b>Protection class</b>	IP65 (panel-mounted and wall-mounted version) IP20 (panel-mounted version, inside the cabinet)	
<b>Agreements</b>	CE	CE; CSA, UR recognized

Specific technical data of UR and CSA recognized products	Universal transmitter	8025 transmitter
<b>Relay output</b>	-	30 V AC and 42 V <sub>peak</sub> max. or 60 V DC max.
<b>Ambient temperature</b>	-	max. 40 °C
<b>Relative humidity</b>	-	max. 80 %
<b>Intended for an inner pollution</b>	-	degree 2 environment
<b>Installation category</b>	-	I
<b>Altitude</b>	-	max. 2000 m



## Ordering chart for compact transmitter Type 8025

## Compact flow transmitter or indicator / totalizer with integrated paddle-wheel sensor

A compact flow transmitter or indicator / totalizer Type 8025 consists of:

- an INSERTION flow transmitter or indicator / totalizer 8025
- an INSERTION fitting Type SO20 (DN15 - DN 400) (Refer to corresponding datasheet - has to be ordered separately)

Specifications	Voltage supply	Output	Relays	Sensor version	Electrical connection	Item no.
<b>Standard output signal transmitter, 2 totalizers</b>	12-30 V DC	4-20 mA (2 wires) + pulse	None	Hall, short	EN 175301-803	418 762
					2 cable glands	418 802
				Hall, long	EN 175301-803	418 763
					2 cable glands	418 803
	115-230 V AC	4-20 mA (3 wires) + pulse	2	Hall, short	2 cable glands	418 778
				Hall, long	2 cable glands	418 779
				Hall, short	2 cable glands	418 423
				Hall, long	2 cable glands	418 424
<b>Indicator, 2 totalizers</b>	2 x 9 V DC Batteries	---	None	Hall, short	2 cable glands	418 431
				Hall, long	2 cable glands	418 432
				Coil, short	None	418 403
				Coil, long	None	418 405

**Note:** FKM gasket in standard; 1 Kit including a black EPDM gasket for the sensor, an obturator for an M 20 x 1.5 cable gland, a 2 x 6 mm multiway seal and a mounting instruction sheet is supplied with each transmitter.

## Ordering chart for remote transmitter Type 8025

## Remote 8025 Universal transmitter (panel- or wall-mounted) for connection to Bürkert or other sensors.

A complete remote universal flow transmitter Type 8025 consists of:

- a remote universal transmitter Type 8025 (wall-mounted or panel-mounted)
- a Bürkert flow sensor\* or any (has to be ordered separately)

Specifications	Voltage supply	Output	Relays	Sensor version*	Electrical connection	Item no.
<b>Universal transmitter, panel mounted</b> 2 totalizers	13-30 V DC	4-20 mA (3 wires) + pulse	None	see note	Terminal strip	419 538
			2	see note	Terminal strip	419 537
<b>Universal transmitter, wall-mounted</b> 2 totalizers	13-30 V DC	4-20 mA (3 wires) + pulse	None	see note	3 cable glands	419 541
			2	see note	3 cable glands	419 540
	115-230 V AC	4-20 mA (3 wires) + pulse	None	see note	3 cable glands	419 544
			2	see note	3 cable glands	419 543

\* NOTE: See the chart about compatible and recommended interconnection possibilities with Bürkert sensors.

## Ordering chart for remote transmitter Type 8025

### Remote 8025 transmitter (for panel or wall mounting) for connection to Bürkert "Low Power" sensors only

A complete remote transmitter Type 8025 consists of:

- a remote transmitter Type 8025 (wall-mounted or panel-mounted)
- an INSERTION flow sensor Type 8020 or INLINE flow sensor SE30, (pulse "Low Power" version) (Refer to corresponding datasheet - has to be ordered separately)
- an INSERTION fitting S020 (DN15 -DN 400) or INLINE fitting S030 (DN6 - DN65) (Refer to corresponding datasheet - has to be ordered separately)

Specifications	Voltage supply	Output	Relays	Sensor version*	Electrical connection	Item no.
<b>Transmitter, panel-mounted</b> 2 totalizers	12-30 V DC	4-20 mA (2 wires) + pulse	None	8020 / 8030 <sup>1)</sup>	Terminal strip	418 992
<b>Transmitter, panel-mounted</b> 2 totalizers agreements CSA, UR recognized	12-30 V DC	4-20 mA (2 wires) + pulse	None	8020 / 8030 <sup>1)</sup>	Terminal strip	552 725
		4-20 mA (3 wires) + pulse	2	8020 / 8030 <sup>1)</sup>	Terminal strip	552 726
<b>Transmitter, wall-mounted</b> 2 totalizers	12-30 V DC	4-20 mA (2 wires) + pulse	None	8020 / 8030 <sup>1)</sup>	3 cable glands	418 397
	115-230 V AC	4-20 mA (2 wires) + pulse	None	8020 / 8030 <sup>1)</sup>	3 cable glands	418 400

\* See the chart about compatible and recommended interconnection possibilities with Bürkert sensors.

1) 8030 = SE30 + S030

### Ordering chart - accessories for transmitter Type 8025 (has to be ordered separately)







Specifications	Item no.
Set with 2 cable glands M 20 x 1.5 + 2 neoprene flat seals for cable gland or plug + 2 screw-plugs M 20 x 1.5 + 2 multiway seals 2 x 6 mm	449 755
Set with 2 reductions M 20 x 1.5 /NPT1/2" + 2 neoprene flat seals for cable gland or plug + 2 screw-plugs M 20 x 1.5	551 782
Set with 1 stopper for unused cable gland M 20 x 1.5 +1 multiway seal 2 x 6 mm for cable gland + 1 black EPDM gasket for the sensor + 1 mounting instruction sheet	551 775
Ring	619 205
Union nut	619 204
Set with 1 green FKM + 1 black EPDM gaskets	552 111
Cable plug Type 2509 - UR and UL approval	162 673

## Interconnection possibilities with other Bürkert flow sensors


Sensor Type	Remote transmitter version			
	Universal transmitter		8025 transmitter	
	Panel	Wall	Panel	Wall
8020 Hall version (short or long) - Frequency output with pulse signal (NPN, PNP, Open Collector)	X	X	-	-
8020 Hall "Low Power" version (short or long) - Frequency output with pulse signal (NPN, Open Collector)	X	X	X	X
8030/8070 Hall version - Frequency output with pulse signal (NPN, PNP, Open Collector)	X	X	-	-
8030/8070 Hall "Low Power" version - Frequency output with pulse signal (NPN, Open Collector)	X	X	X	X
8030 High temperature - Frequency output with pulse signal (NPN, PNP, Open Collector)	X	X	-	-
SE30 Ex	X	X	-	-
8031 - Frequency output with pulse signal (NPN)	X	X	-	-
8041 - Frequency output with pulse signal (NPN)	X	X <sup>1)</sup>	-	-
8071 - Frequency output with pulse signal (NPN)	X	X	-	-

X = Compatible or recommended interconnection possibilities

1) except sensor with Item no. 419543

Available S020 Fitting DN	T-fitting S020			DN 06	DN 15	DN65
				only 8041	Short sensor	
	Welding tab S020					DN50
					Short sensor	DN200
						DN350
	Fusion spigot S020				DN65	DN100
					Short sensor	Long sensor
						DN400
	Screw-on S020					DN100
						Long sensor
						DN400
	Saddle S020				DN50	DN200
					Long sensor	

**Interconnection possibilities with other Bürkert flow sensors**

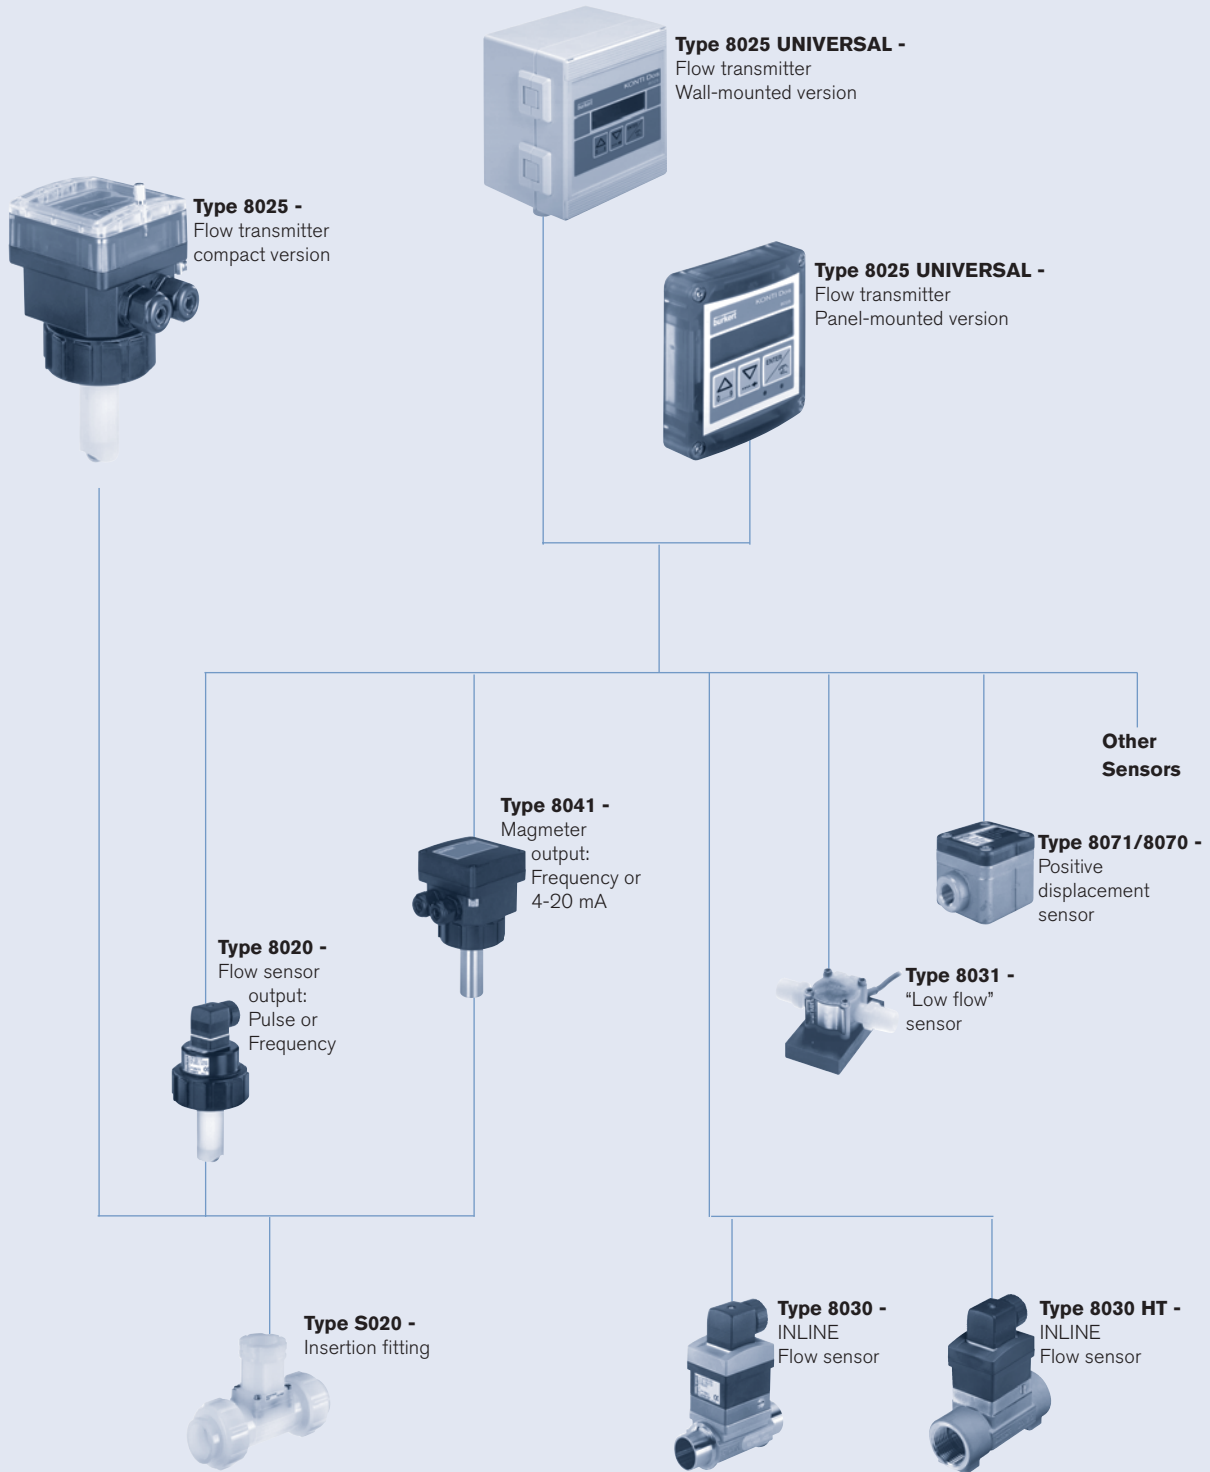

To find your nearest Bürkert facility, click on the orange box →

[www.burkert.com](http://www.burkert.com)

In case of special application conditions,  
please consult for advice.

We reserve the right to make technical  
changes without notice.

0608/1\_EU-en\_00891776